

### Normal Flow

Scan2D Outer Barcode



Accept



### Inner/Outer Flow

Scan2D Outer Barcode



Omnicell Only



Scan 1D Inner Barcode



Accept



### Manual Restock Flow

Reset



Scan 1D Barcode




Add Quantity



Manual Save



Manual / Enter  
'Manual Restock'  
Mode

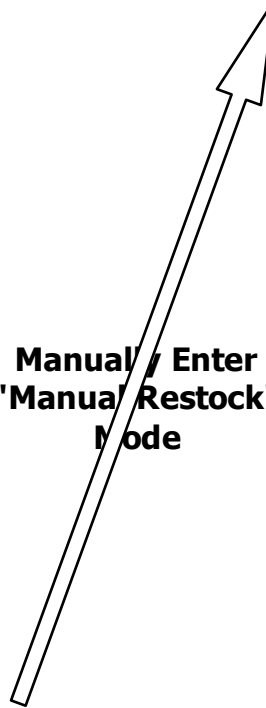

Raw Scan



Enable



Disable

