



ScanCast™ Action Barcodes:


RI060091 - Large (3x3)

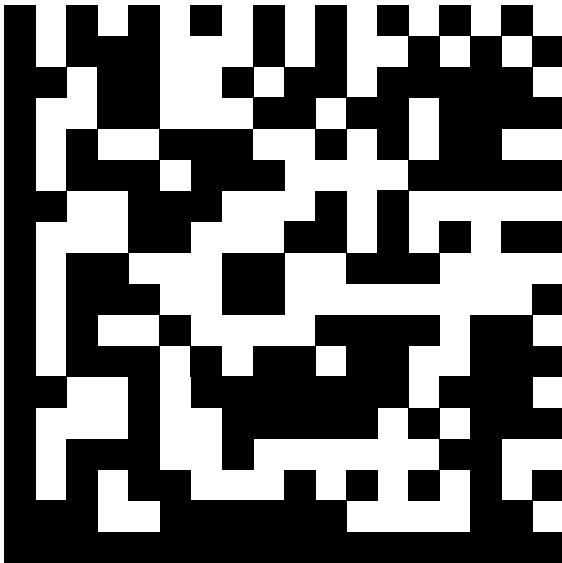


Reset

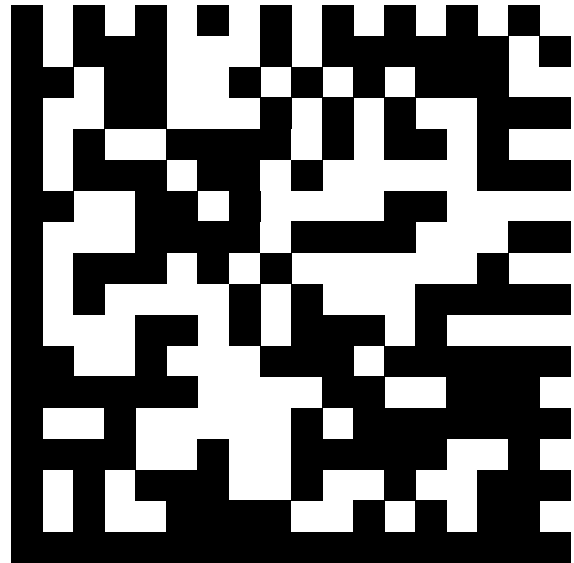

Continue

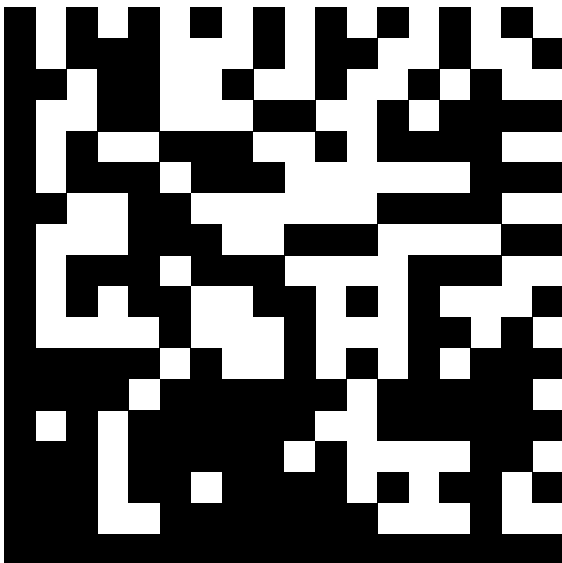

Free Scan Mode

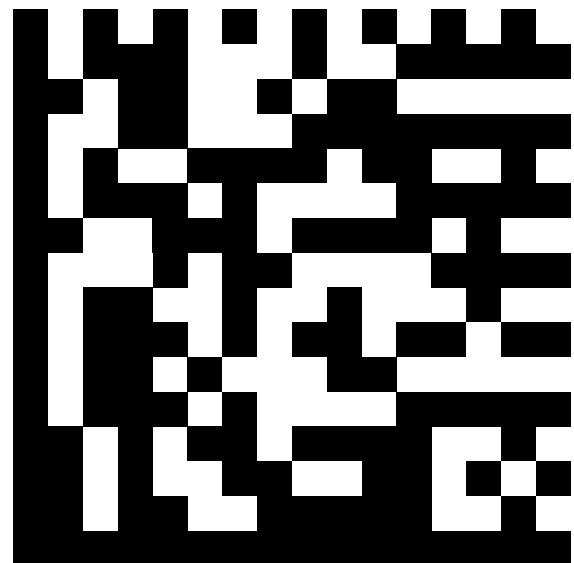


Add Zero


[1] This action is available from any state. [2] Default Setting on Power-up. [3] This setting is stored in Non-volatile memory and will be retained over power-cycles. [4] This is the factory default setting.

ScanCast™ Action Barcodes:


RI060091 - Large (3x3)

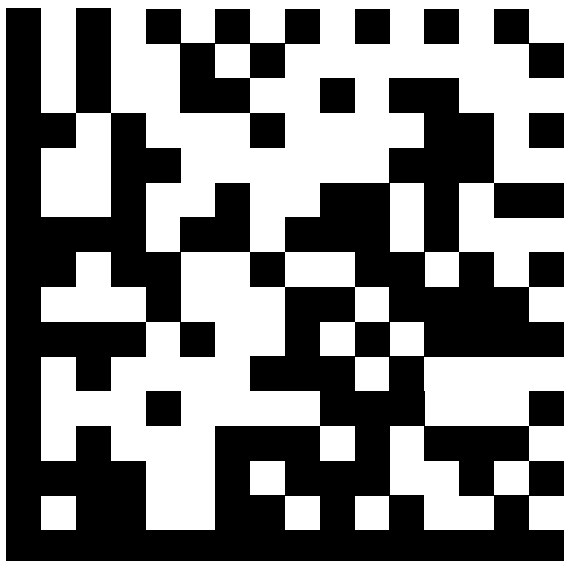


Up ^[1]

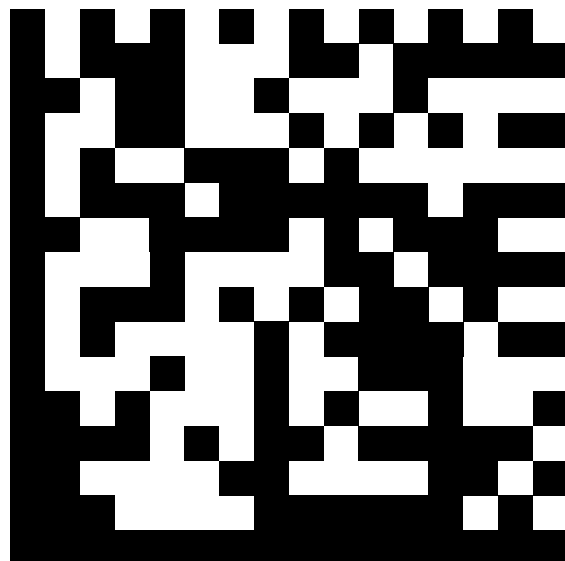

Down ^[1]

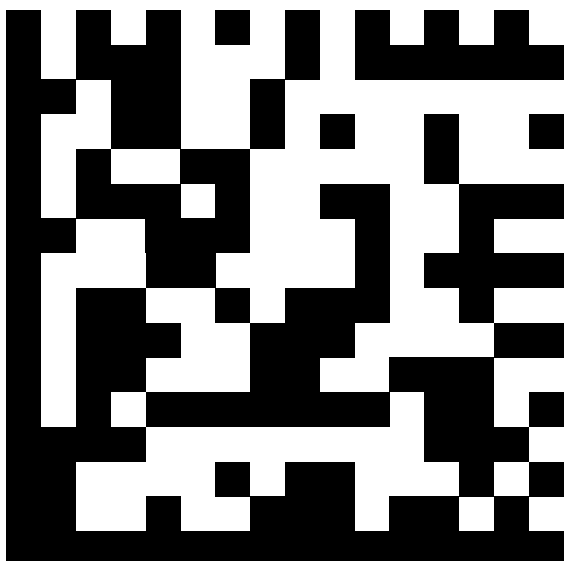

Yes ^[1]

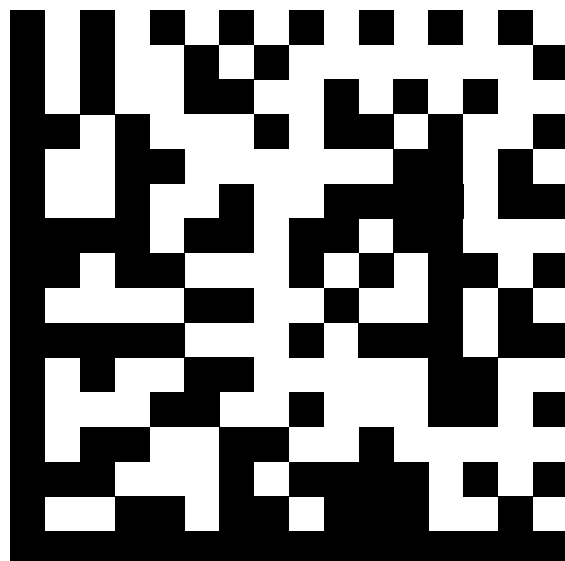


No ^[1]


[1] This action is available from any state. [2] Default Setting on Power-up. [3] This setting is stored in Non-volatile memory and will be retained over power-cycles. [4] This is the factory default setting.

ScanCast™ Action Barcodes:


RI060091 - Large (3x3)

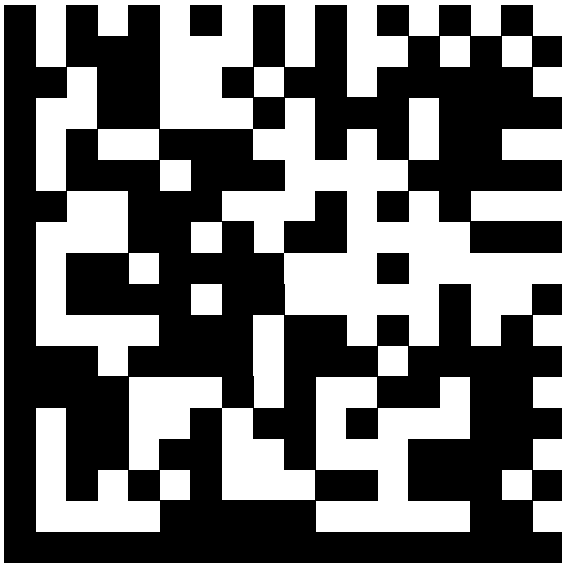


Enter ^[1]

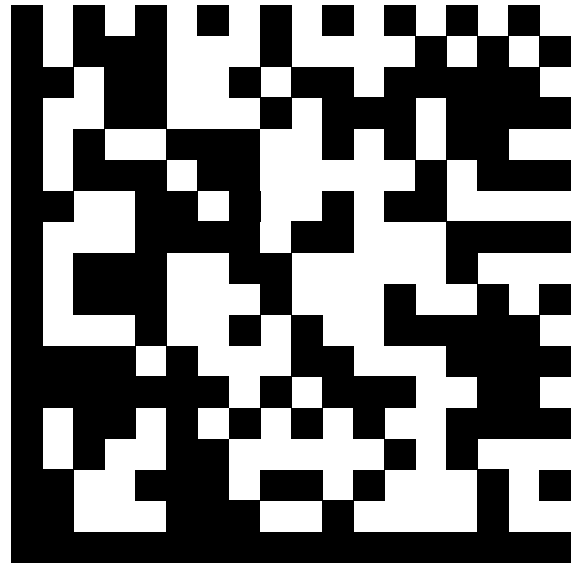

F2 ^[1]

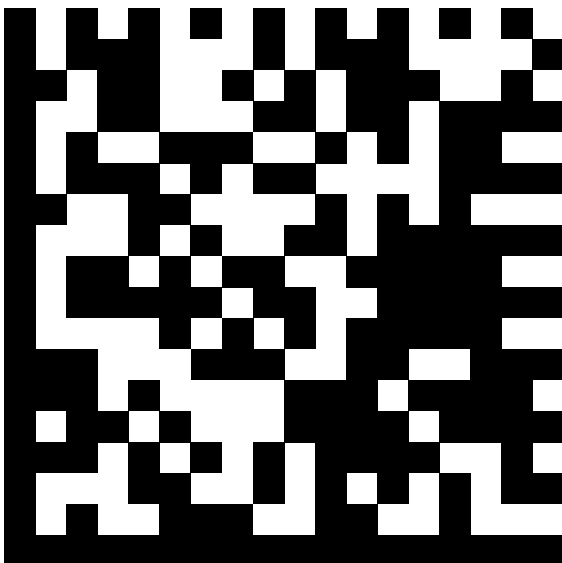

Enable ^[2]

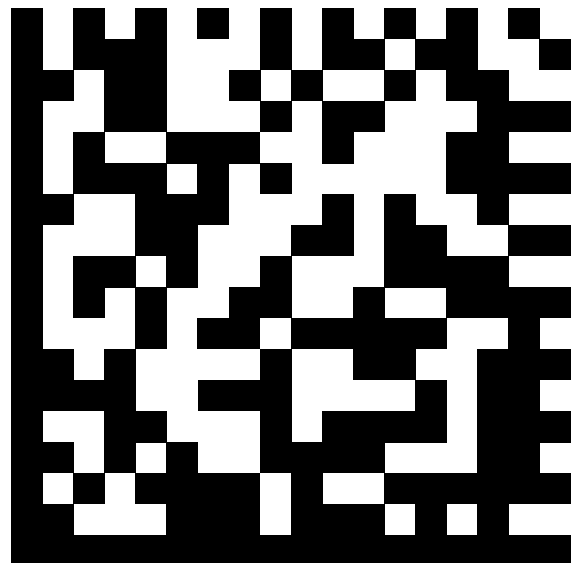


Disable


[1] This action is available from any state. [2] Default Setting on Power-up. [3] This setting is stored in Non-volatile memory and will be retained over power-cycles. [4] This is the factory default setting.

ScanCast™ Action Barcodes:

RI060091 - Large (3x3)

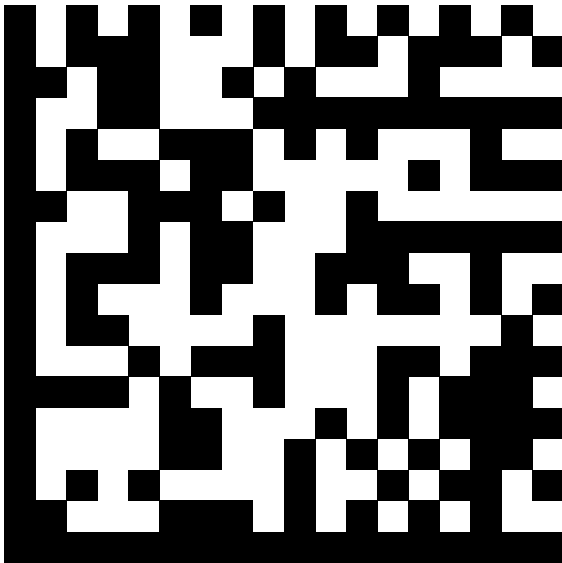

Workflow A ^[3,4]

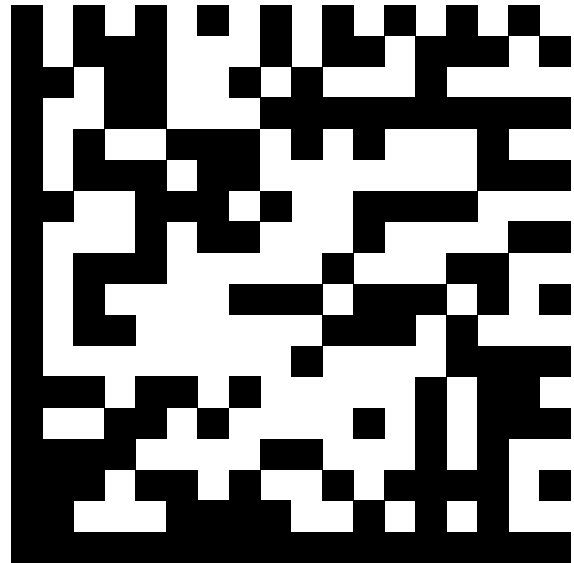

Workflow B ^[3]

[1] This action is available from any state. [2] Default Setting on Power-up. [3] This setting is stored in Non-volatile memory and will be retained over power-cycles. [4] This is the factory default setting.